


Typically, a 2400mm x 1200mm insulation board is cut as follows and the offcut is often not used:

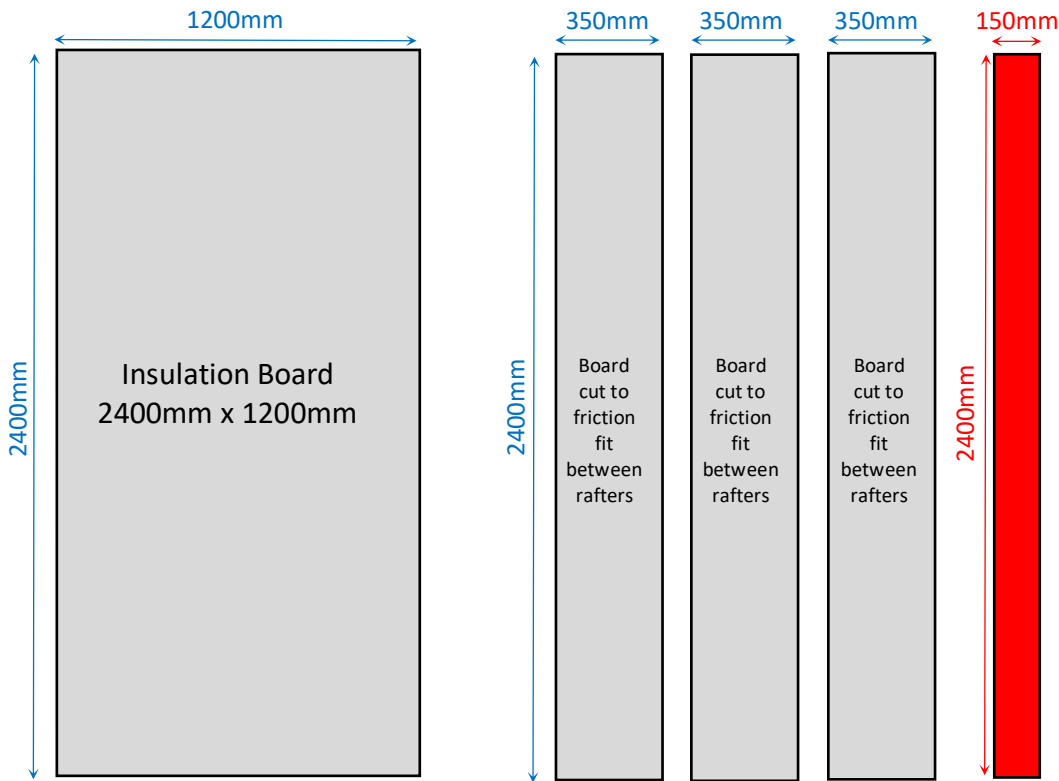


With Friction Fitting:

Where offcut *not* used:
 2400mm X 150mm
 = **0.36m²**

Board wasted:
12.5%

Using Insulfix Track – 2400mm x 100mm offcut is cut to 6 X 350mm X 100mm & fitted into Track

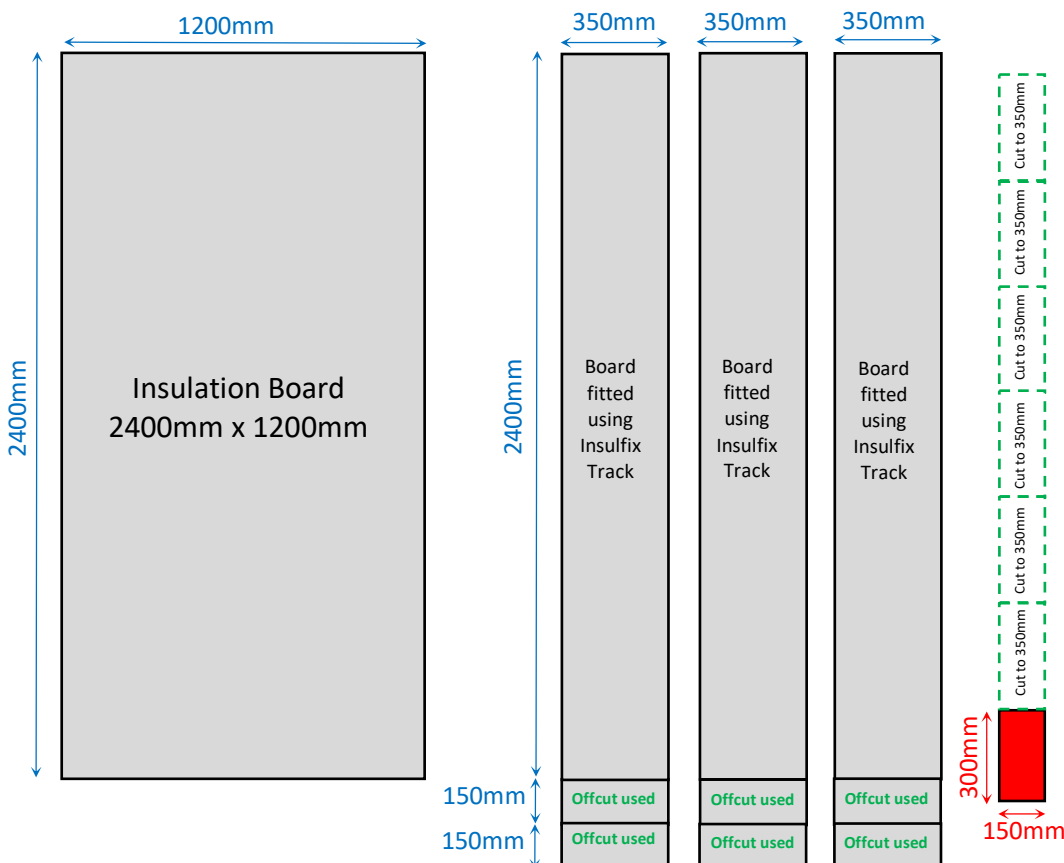

With Insulfix Track:

Where offcut *is* used:
 300mm X 150mm
 = **0.045m²**

Board wasted:
1.6%

With Insulfix Track when using offcuts:

10.9%
MORE board used
87.5%
LESS offcuts wasted